





# GARDIX fail-safe inductive sensor ISS/ISN/ISD-10-B-GD

Safety device according to the machine directive 2006/42/EC, short form data sheet

When installing and operating the sensor, it is necessary to take into consideration the complete operating manual.





- Housing M30, embeddable mounting method (flush mountable)
- PDDB according to EN 60947-5-3
- Type ISD: For use in Ex Zones 2 and 22

		Type ISD: For use in	Ex Zones	1, 2, 20/21, 22	
Technical Data Ty	ype ISS-10-B	ISN-10-B-G		ISD-10-B-GD	
Туре		SRP/CS - SREC, fail-safe indu		PDDB, I1A30AP1	
Performance Level (PL), EN 13849-1		PL			
Safety category, EN 13849-1 Safety integrity level, EN 62061		SILO	1 기 3		
Safety-related reliability PFHd [1/h]		2.47 >			
MTTFd [Years]		10			
DC/CCF/Cat.		99% /	92 / 4		
Gas Ex protection according to directive RL 2		II 3G Ex nA IIB T	4 Gc	II 2G Ex db IIC T5 Gb	
Gas Ex protection according to IECEx	NONE	NONE		Ex db IIC T5 Gb	
Dust Ex protection according to directive RL		II 3D Ex to IIIA T135°	C Dc IP67	II 1/2D Exta/tb IIIC T100°C Da/Db IP67	
Dust Ex protection according to IECEx Only for use in Ex zones	NONE	NONE 2, 22		Ex ta/tb IIIC T100°C Da/Db IP67 1, 2, 20/21, 22	
Installation method		embaddable (flu	ush) mountah		
Rated operating distance sn,	10mm.	(on steel 37, (sn x 3) <sup>2</sup> x 1mm), a			
Enable zone		>=3mm <=8mm, (on steel	37, (30mm x	30mm x 1mm)	
Hysteresis			.5mm		
Safe switching off distance s(ar)			nm		
Repeatability Utilzation category		<100 DC			
Supply voltage Ue	24\/D	C +-10% (Power supply type PE		to EN 60204 item 6.4.2)	
Absolute maximum supply voltage Um		30V		to EN 00204, Rem 0.4.2)	
Rated insulation voltage		75VDC/			
Current consumption		351	mA		
Maximum power dissipation		0.9			
Response time to safety request		201			
Power up delay time OSSD		200 2 x PNP (A			
Output voltage at 24 V		compatible with EN 611		/pe 1. 2. 3	
Voltage drop			(70mA)	7,00 1, 2, 0	
Current rating			mA		
Short-circuit protection		ye			
Display		LED green (OSSD=ON)			
Housing Enclosure rating, according to EN 60529		M30, brass, nickel plated / Sens		ithetic, PEEK mod.	
Ambient working temperature range Tam		-10°C < Tar			
Storage temperature range		-45°C			
EMC, shock and vibration resistance		according to E			
Connection cable			4-	PE x 0,5mm², TPU jacket, shielde	
				leads numbering marked, diameter: 6.3mm, length: 6m	
Socket	M12 n	nale, 5-wires,type Lumberg RSF	-5	NONE	
Accessories		- 2x nuts M30. (Optional 1x clamp)			
Accessories, only ISN-10-B-GD, include		k device, mount at the cable cor			
		late "Do not open/close when su		connected",	
		g, for gluing on the cable connection cap for the sensor socket.	ctor.		
Accessories, only ISS/ISN-10-B(-GD)			r RKWTH 5-3	298/xx, Lumberg, NOT INCLUDED	
Options		- Other cable lengths on request			
•	- ISD-10-B-GD-	S223: Housing stainless steel 3			
	- IS*-10-B-GD-S	S299: Housing stainless steel 1.4	404 (316L)		
Function and	- I				
LED indication		<b>D</b>			
	<u> </u>				
	Object de	etected, LED green	No ob	ject detected, LED red	
Output with dynamic test function		_		Outputs, Transistors open.	
Object detected, Outputs switch		outs, Transistors conducted.	Z X PNP-C	Transistors open.  + + → 1: +24VDC	
+ VDC	led ON	□ 1. +24VDC		1. +24VDC	
+ VDC	+ -	<b>(</b>	\_	- A. OOOD 44	
		□ 3: OSSD A1		3: OSSD A1	
0V J   20ms   J	4 -	<b>K</b>	\-	<sup> </sup>	
Outputs inactive 200us (Test pulse)		→ 4: OSSD A2	\	4: OSSD A2	
no object detected			_	Safe state 2: 0V	
Installation: Lateral protection plates r			ors for not	IS*-10-B(-GD): For embeddabl	
Sensors for non flush mounting arrange	ement have the highest ope	rating distance, but a embeddab	le installation	installation method	
part of the parasitic lateral electromagn		safe function. Lateral method.	1		
protoction plotoc or -th					
protection plates or other metallic objects	s must not influence the Ser	sor. For safe function	<u>1 -</u> :1^		
a lateral free space around the sensor	s must not influence the Ser must be guaranteed. The	sor. For safe function series IS*-10-B(-GD),			
a lateral free space around the sensor sensors for flush (embeddable) mount	s must not influence the Ser must be guaranteed. The ting, no lateral free space is	sor. For safe function series IS*-10-B(-GD), s required (A=0). It's		Z-Motol	
a lateral free space around the sensor sensors for <b>flush (embeddable)</b> mount possible to realize a better mechanical pr	s must not influence the Ser must be guaranteed. The ting, no lateral free space is rotection and they have a high	sor. For safe function series IS*-10-B(-GD), s required (A=0). It's gher immunity against		⊒= Metal	
a lateral free space around the sensor sensors for <b>flush</b> ( <b>embeddable</b> ) mount possible to realize a better mechanical pr spurious releasing. In a not embedded mo of operating distance (sa) then sensors	s must not influence the Ser must be guaranteed. The ting, no lateral free space is rotection and they have a high unting arrangement the sens	usor. For safe function series IS*-10-B(-GD), s required (A=0). It's pare immunity against ors reach a lower level		⊒ = Metal A=0mm	
a lateral free space around the sensor sensors for <b>flush</b> ( <b>embeddable</b> ) mount possible to realize a better mechanical pr spurious releasing. In a not embedded mo of operating distance (sa) then sensors Exrelated markings: CE 1258	s must not influence the Ser must be guaranteed. The ting, no lateral free space is rotection and they have a high sunting arrangement the sens for not embeddable mount Manufacturerwi	ssor. For safe function series IS*-10-B(-GD), s required (A=0). It's pher immunity against ors reach a lower level ing.  A=laterale thaddress			
a lateral free space around the sensor sensors for <b>flush</b> ( <b>embeddable</b> ) mount possible to realize a better mechanical pr spurious releasing. In a not embedded mo of operating distance (sa) then sensors Exrelated markings: CE 1258  Type ISD: EC-type examination certific	s must not influence the Ser must be guaranteed. The ting, no lateral free space is rotection and they have a high unting arrangement the sens for not embeddable mount Manufacturerwitation No. BVS 07 ATE	Isor. For safe function series IS*-10-B(-GD), series IS*-10-B(-GD)			
a lateral free space around the sensor sensors for <b>flush (embeddable)</b> mount possible to realize a better mechanical pr spurious releasing. In a not embedded mo of operating distance (sa) then sensors Exrelated markings: CE 1258	s must not influence the Ser must be guaranteed. The ting, no lateral free space is rotection and they have a high unting arrangement the sense for not embeddable mount Manufacturerwith No. BVS 07 ATE No. IECEx 18.00	Isor. For safe function series IS*-10-B(-GD), series IS*-10-B(-GD)			

#### Operating manual, short form, EC-/EU-Declaration of Conformity:

# Accident prevention: Definite Application:

The PDDB ISS/ISN/ISD-10-B(-GD) is a fail-safe inductive sensor conform the machine directive 2006/42/EC. The sensor detects non-contact metallic objects and is provided for the protection of humans and machines. The outputs (OSSD) will be only unblocked, when metallic objects are detected in the enable range. The fail-safe inductive sensor must only be operated with fail-safe relay or other fail-safe equipment. When installing and operating the sensor, it is necessary to take into consideration the complete operating manual. The sensor must be installed, connected and put into operation only by qualified electrician trained in safety technology. The outputs (OSSD) must not be connected direct to the machinery circuit. The outputs (OSSD) of the sensor must only be connected at emergency stop relay or other approved electronic safety devices. The installation must be protected against defeating. The sensor reacts to metal objects, e.g. the frame of a safety door. Other metal objects that are intended to enable the sensor must not be allowed to enable the sensor, either intentionally or unintentionally. Use the sensor only in the specified environmental conditions. The sensor must only be repaired by the manufacturer. Tampering with the sensor is not allowed. Disconnect the sensor externally before handling it. Also disconnect any supplied relay load circuits. The applicable standards for the corresponding application must be complied with. For installations the requirements according to IEC/EN 60204 must be observed. After powerup a complete function and safety test must be executed. Also without supply voltage, leaking currents up to 2mA are possible. All connections and installations must be executed at safety fundamental rules. It must be ensured, that the machinery residuals off after a safe switch-off or a defect of the sensor.

### Installation prescriptions for Ex hazardous locations:

It is necessary to take into consideration the valid international and national rules and regulations (EN 60079-14). Do not exceed the maximum ratings. The local equipotential bonding have to be done. The protective earth (PE/PA) is solid connected with the housing and the cable shielding. The cable have to be installed and protected against damages. The cable with termination fittings, or in cable tray systems and installed in a manner to avoid tensile stress at the termination fittings. To connect cables inside hazardous locations only use certificated Ex e housings. All cable terminals must be connected outside hazardous locations. The maximum rated input voltage Um = 30VDC must not be exceeded.

**Type ISD-10-B-GD:** Only for use in Ex zones 1, 2, 20/21, 22. For the zones 20/21 only the front part (sensitive area) can be mounted inside the zone 20. The rear part with the cable must be in the zone 21.

Type ISN-10-B-GD: Only for use in Ex zones 2, 22. Do not separate the connector when the supply voltage is connected to the cable. When installing the sensor, the safety lock device must be fitted at the cable connector. The additional adhesive warning label must be fixed to the connector housing at the connection cable. Lumberg cordsets RKTS 5-298/xx (Straight type) or RKWTH 5-298/xx (Right angle type), are allowed ONLY. It is necessary to take into consideration the mounting prescription of the connector manufacturer. In dusty locations, the protection cap for the sensor socket must be fitted, when no connection cable is connected.

#### Additional safety information related Ex protection:

BVS 07 ATEX E 044 X: X = The plastic part of the housing (sensitive area) must be protected against direct sunlight and UV irradiation.

#### General mounting prescriptions:

It must be ensured that all requirements of the respective application correspond to the requirements stated in these and the complete operating manual instructions. The sensor can only be flush mounted. Because the sensor reacts to metal objects, it must be ensured, that other metal objects not can enable the sensor, either intentionally or unintentionally (EN 1088). A horizontal mounting is to prefer. Lateral protection plates must not rise above the sensor. Metallic protection plates must not rise above the sensor. Electrolytic fluids, graphitized greases or other magnetizable substances can disturb the correct function. All post-switched circuits must also be certificated for the required safety level. The electrical connections must be exactly as shown in the connection diagram. The cable shield must be connected short. The cable shield should be connected to the protection earth, large-surfaced. Connection cables must not be installed parallel to high voltage cables. The maximum allowed capacitance at the outputs must be <= 470nF.

#### Function:

When a metallic object is entering the detection field, both dynamic tested outputs (OSSD) becomes active (switching ON). Is no object detected both outputs becomes inactive (safe state, OFF). If metallic or other permeable objects are positioned near or direct (<=3mm) on the sensitive

area of the sensor, both outputs are also switching OFF. The fail-safe inductive sensors of the series ISS/ISN/ISD-10-B(-GD) are built in a 2-channel different redundancy. Failures and disturbances results to outputs are switching OFF and the LED is blinking red. The safe-state is the same as no object is detected. (Output is switching OFF). The emergency OFF state is only resetable by separating the supply voltage. Chemical resistance:

The sensor must not be exposed to the following substances: Formic Acid, Chlorosulfonic Acid, Chronic Acid conc., Hydrochloric Acid, Hydrobromic Acid (100%), Oluem, Azotic Acid, Sulphuric Acid, Bromine, Chlorine, Ferric(III)-chlorid, Fluorine, Iodine, Sodium (hot), concentrated Phenol. Maintenance:

The sensor does not require any special maintenance. Magnetic precipitations must be cleared. Equipment must only be repaired or serviced by the manufacturer.

#### General notes to the operating distance:

The nominal operating distance sn (IEC/EN60947-2-5) does not take into account production tolerances and influences of temperature or voltage. The safe operating distance sa is the minimal reachable operating distance on steel 37 (30mmx30mmx1mm) on all mounting arrangements. On other materials or smaller objects a reduction factor must be taken into account.

Material	Reduction factor		
Steel 37	1		
Stainless steel	0,8		
Aluminum	0,4		

Safety distance sd: An inductive sensor is safe switched OFF, when the distance between sensor and actuator plate is greater then 3 x nominal distance sn.

#### General safety instructions:

Small or bad magnetizable parts, placed direct on or near the sensitive area results not to the near range switching-off.

ISN-10-B-GD: "WARNING - EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES. DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS". The mounting of the sensor in dusty locations without fixed cordset or protection cap results in a high ignition risk. When installing and operating with the sensor, it is necessary to take into consideration the relevant international and other national regulations: IEC/EN 60204, IEC/EN 60079-14, single directive 1999/92/EC

The sensors are conform to the following directives and standards: Machine directive: 2006/42/EC, ATEX directive: 2014/34/EU, EMC directive: 2014/30/EU, RoHS directive: 2011/65/EU, EN 60947-5-1/A2:2015-05, EN 60947-5-2:2014-01, EN 60947-5-3:2014-12, EN 13849-1/A1:2013-09, EN 62061/A2:2015-02; EN 60079-0:2012+A11:2013, EN 60079-1:2014, EN 60079-15:2010, EN 60079-31: 2014, EN 60529:2014, EN 61326-3-1:2015-06

#### General notes, disposal:

We reserve the right to modify our equipment. Our equipment is designed in accordance with the RoHS directive. It neither emit or contain any damaging or siliconized substances and use a minimum of energy and resources. No longer usable or irreparable units must be disposed of in accordance with local waste disposal regulations.

### EC-/EU Declaration of conformity, short-form

#### Approvals:

Fail-safe: PDDB in accordance with IEC/EN 60947-5-3, certification number: ET 17036, Berufsgenossenschaft Energie Textil Elektro Medienerzeugnisse, Fachausschuss Elektrotechnik, Prüf- und Zertifizierungsstelle im DGUV Test, Gustav-Heinemann-Ufer 130, D-50968 Köln, CE 0340.

IECEx certification, type ISD: Ex db IIC T5 Gb, Ex ta/tb IIIC T100°C Da/Db IP67. Certification No. IECEx BVS 18.0022X.

ATEX certification, type ISD: II 2G Ex db IIC T5 Gb, II 1/2D Ex ta/tb IIIC T100°C Da/Db IP67. Certification number: BVS 07 ATEX E 044 X, DEKRA EXAM GmbH, Zertifizierungsstelle, Carl-Beyling-Haus, Dinendahlstrasse 9, D-44809 Bochum, CE 0158. ATEX certification, type ISN: II 3G Ex nA IIB T4 Gc, II 3D Ex tc IIIA T135°C Dc IP67. ATEX declaration by manufacturer according to the ATEX directive 2014/34/EU. ATEX certification of quality type production of Ex devices according to the ATEX directive 2014/34/EU, CE 1258, Eurofins. Certification No: SEV 21 ATEX 4580. The conformity of the devices with the EC standards and directives and the EC-type examination certificate and the observation of the Quality Management System ISO 9001:2015 with the ATEX module "Production", declares:

Pablo Ledergerber, Matrix Elektronik AG

**Tippkemper - Matrix GmbH**Meegener Str. 43 D-51491 Overath
Tel.:+49 2206 9566-0 Fax -19

nfo@tippkemper-matrix.com

Matrix Elektronik AG (Manufacturer) Kirchweg 24 CH-5420 Ehrendingen Tel.:+4156 20400-20 Fax -29

nfo@matrix-elektronik.com

Page 2 of 2