

**Rotation Speed Control Sensors series IRS/IRN/IRD-LTD(-OP)**
**IRD-LTD-OP**

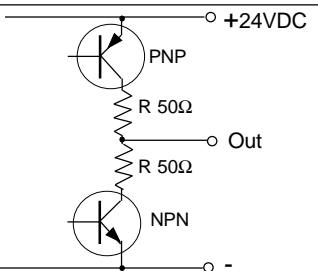
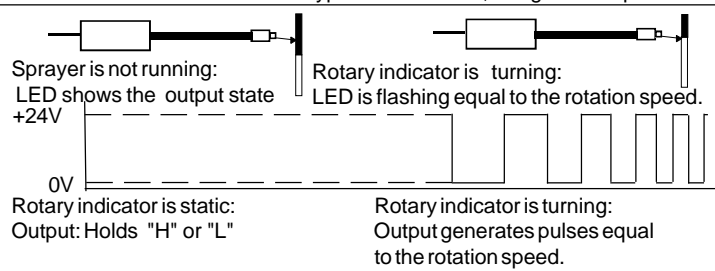
 II 2(1)G Ex d [op is Ga] IIC T6 Gb  
 II 2(1)D Ex tb [op is Da] IIIB T100°C Db IP67

**Housing M30**

- Well applicable with plastic and glass fibre optics
- Laser-emitter, red light 650nm
- Type IRD: applicable in Ex Zones (0),1, 2, (20),21, 22
- Type IRN: applicable in Ex Zones (1),2, (21),22
- Type IRO: applicable for Ex Zone (2)
- Speed control up to 100'000 RPM
- Very high reliability (EMC)

**IRN-LTD-OP**

 II 3(2)G Ex nA [op is Gb] IIB T4 Gc  
 II 3(2)D Ex tc [op is Db] IIIA T135°C Dc IP67

Technical Data	Type	IRS-LTD	IRO-LTD-OP	IRN-LTD-OP	IRD-LTD-OP
Type of Ex protection, Gas, at 94/9/EG		NONE	II (3)G [Ex op is Gc] IIB	II 3(2)G Ex nA [op is Gb] IIB T4 Gc	II 2(1)G Ex d [op is Ga] IIC T6 Gb
Type of Ex protection, Dust, at 94/9/EG		NONE	NONE	II 3(2)D Extc [op is Db] IIIA T135°C Dc IP67	II 2(1)D Extb [op is Da] IIIB T100°C Db IP67
Applicable in Ex Zones		Not for Ex zones	(2)	(1), 2, (21), 22	(0), 1, 2, (20), 21, 22
Laser class		Class II, 650nm visible red, Po <= 1mW			
Maximum radiant intensity		NOTLIMITED	<=5mW/mm <sup>2</sup>	<=5mW/mm <sup>2</sup>	<=5mW/mm <sup>2</sup>
Maximum radiant power		NOTLIMITED	< 35mW	< 35mW	< 15mW
Switching frequency		0,1kHz - 10kHz <sup>Note1</sup>			
Rise time		<= 2us			
Power up delay time		2sec			
Supply voltage		24VDC +-10%			
Absolute maximum input voltage Um		30VDC			
Current consumption		60mA			
Power dissipation		maximum 1.68W			
Output		1 x Push-Pull, short circuit protected, maximum 10mA			
Output impedance		max.50Ω			
Housing		M30, brass, nickel plated			
Enclosure rating at EN 60529		IP 65	IP 67	IP 67	IP 67
Vibration shock resistance		Vibration: 30g over 20Hz to 2kHz. Shock: 100g for 3ms			
Working temperature range T <sub>amb</sub>		0°C < T <sub>amb</sub> < +50°C			
Ambient illumination		only for using in enclosed ambients			
Electrical connection		Socket, Binder series 717	Cable, 3+PE x 0,5mm <sup>2</sup> , shielded, jacket TPU, L=10m		
Connection, IRN/IRS-LTD(-OP) S99		Socket, M12, 5 terminals	--		
Optical fibre connection		Matrix connection, applicable with the series PA and PV			
Accessories, included all types		- 2x Nuts M30			
Accessories, type IRN-U-LTD-OP, included NOTFORNEWAPPLICATIONS		- 1x Safety lock screw for connector types Binder series 717, for fixing the connector housing at the sensor. The original screw must be exchanged by the new safety screw.			
Accessories, type IRN-LTD-OP S99, included		- 1x Safety lock device, mount at the cable connection, for locking the connection. (black synthetic device)			
Accessories, types IRN-U-LTD-OP and IRN-LTD-OP S99, included		- 1x Warning plate "Do not separate when supply voltage connected", self-sealing, for gluing on the cable connector. - 1x Protection cap for the sensor connector.			
Accessories, IRN-U-LTD-OP, not included		- Cable connector: Binder series 717 No: 09-0534-00-05			
Accessories, IRN-LTD-OP-S99 not included		- Single ended cordset, straight type: RKTS 5-298/xx or right angle type: RKWTH 5-298/xx, Lumberg M12/5P			
Accessories, all types, not included		- Different types of optical fibres, on demand - Fast fixing adapter for POF			
Options		-IRN-U-LTD-OP: Socket type Binder 717. NOT FOR NEW APPLICATIONS -IRD-LTD-OP S98: Cable type Ölflex 810CP, L=20m -IRS/IRN-LTD(-OP) S99: Socket M12: Lumberg RSF 5 -IRD-LTD-OP S136: Cable type Ölflex 810CP, L=15m -IRD-LTD-OP S165: Cable type Ölflex 810CP, Length on request			
Output Function:					

ATEX related designations:

CE 0158

Type IRD-LTD-OP:


 Manufacturer with address  
 II 2(1)G Ex d [op is Ga] IIC T6 Gb  
 II 2(1)D Ex tb [op is Da] IIIB T100°C Db IP67

Type IRN-LTD-OP:


 II 3(2)G Ex nA [op is Gb] IIB T4 Gc  
 II 3(2)D Ex tc [op is Db] IIIA T135°C Dc IP67

 T<sub>amb</sub>: 0°C < T<sub>amb</sub> < +50°C

Date of production:

Electrical data according to the chart

EC certification number: BVS 10 ATEX E 130 X DEKRA

EC certification number: BVS 10 ATEX E 130 X DEKRA

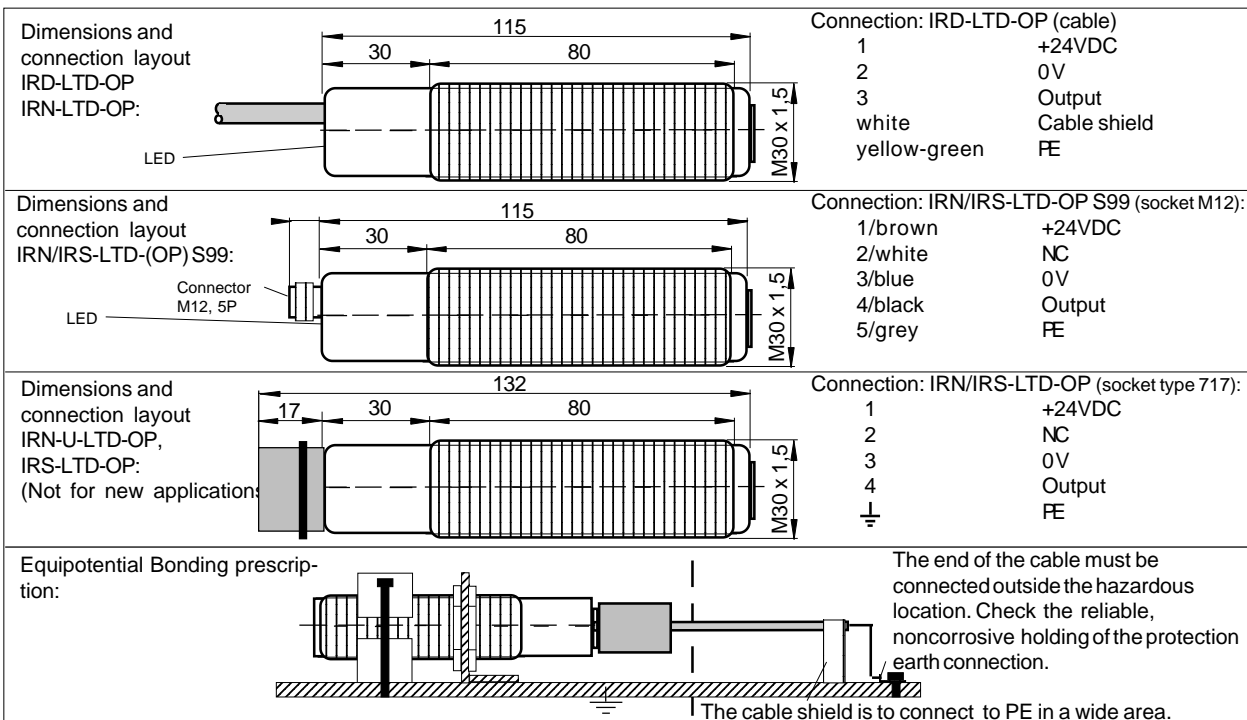
Declaration by manufacturer at 94/9/EC

Declaration by manufacturer at 94/9/EC

Numerals 5 to 8 of the serial number(year/calendar week)

(X designation of the certification number: Fibre optics must only be applied with sensors with certificated limited optical power)

Note 1: The real reachable switching/rotary frequency is dependent on the condition and type of the marking disc (2 or 4 sectioning) and the careful working up of the optical fibres.



**Operating Manual / EC - Declaration of Conformity:**

**Operating Manual:**

**Ex protection:**

General prescriptions for all Ex devices:  
 It is necessary to take into consideration the valid international and national rules and regulations (EN 60079-14). The maximum input voltage  $U_m=30VDC$  must not be exceeded. The local equipotential bonding have to be done. The protective earth (PE) terminal is solid connected with the housing. The cable have to be protected against damages. To connect cables inside hazardous locations only use certificated Ex housings. All cable terminals must be connected outside hazardous locations. Use only original manufactured fibre optics and additional optical lenses, other additional optical lenses are not allowed in hazardous locations.  
 Type: IRD-LTD-OP: Applicable in Ex zones 1, 2, 21, 22. The limited optical radiation can operate into hazardous locations 0 or 20 over certificated fibre optics or through a viewing glass.  
 Type: IRN-LTD-OP: Only applicable in Ex zones 2, 22. The limited optical radiation can operate into hazardous locations 1 or 21 over certificated fibre optics or through a viewing glass.  
 Type: IRN-LTD-OP S99 and IRN-U-LTD-OP: Only applicable in Ex zones 2, 22. The limited optical radiation can operate into hazardous locations 1 or 21 over certificated fibre optics or through a viewing glass. Do not separate the connector when the supply voltage is connected to the cable. When installing the sensor, the safety lock device must be fitted at the cable connector. The additional adhesive warning label must be fixed to the connector housing at the connection cable. Lumberg cordsets RKTS 5-298/xx (Straight type) or RKWTH 5-298/xx (Right angle type) are allowed ONLY. It is necessary to take into consideration the mounting prescription of the connector manufacturer. In dusty locations, the socket protection cap must be fitted, when the connection cable is not connected.

**General mounting prescriptions:**

Do not exceed the maximum ratings. The electrical connections must be exactly as shown in the connection diagram. The cable shield must be connected short. The cable shield should be connected to the protection earth, large-surfaced. Connection cables must not be installed parallel to high voltage cables.

**Function:**

The sensor can only be used with connected fibre optics. Laser light reflection alterations, generated by the marking disc of the spraying apparatus, will be amplified and formed. At lower then minimum frequency the output can shows any state. Because the device has a really high sensitivity, the output can show any different frequencies at standstill of the sprayer, this signals will be generated by small vibrations or concussions of the fibre optics.

**Using the fibre optics**

The sensor I...LTD must not go into operation without mounted fibre optics. The fibre optics must be handled careful. The functional safety of the sensor is given by the condition of the marking disc and the careful working up of the optical fibres. The fibre optics must not be buckled or laid with a small radius. Buckled

or bad laid fibre optics results to a strong decrease of performance. Avoid performance decreasing and failures caused by wear, by a functional mounting of the fibre optics.

**Maintenance**

Protect the fibre optic adaptor of the sensor and the optical fibres against pollution. If the fibre optic adapter is contaminated, clean with alcohol. Do not use aggressive solvents. Plastic optical fibres can be destroyed by strong solvents. Equipment must only be repaired or serviced by the manufacturer.

**Safety regulations for Laser devices**

By the installation, the going into operation and the application, it is necessary to take into consideration the valid rule EN 60825-1/-2 (Parts 12.5.1/12.6.2). Laser Class 2 without connected fibre optics. Do not stare into the beam!

**General safety instructions**

Series IRN-LTD-OP S99: "WARNING - EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES. DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS". The mounting of the sensor in dusty locations without fixed cordset or protection cap results in a high ignition risk. The sensors must not be used for Accident-Prevention! In worst case the output can change to any state! When installing and operating with the sensor, it is necessary to take into consideration the relevant international and other national regulations:

EN 60079-14, ATEX 118a, single directive 1999/92/EC. The sensor and the fibre optic are conform to the following standards:  
 EN 60079-0:2012+A1:2013, EN 60079-1:2007, EN 60079-15:2010, EN 60079-28:2007, EN 60079-31:2010, EN 60825-1:2006, EN 60825-2:2004; EN 60529; EN 61000-4-2 to EN 61000-4-6, EN 61000-6-1/-2, EN 61000-6-4. ATEX directive: 94/9/EC, Machine directive: 2006/42/EC, EMC directive: 2004/108/EC, RoHS directive: 2011/65/EC.

**General Notes, disposal**

We reserve the right to modify our equipment. Our equipment is designed such way, that it has the least possible adverse effect on the environment. It neither emit or contain any damaging or siliconized substances and use a minimum of energy and resources. No longer usable or irreparable units must be disposed of in accordance with local waste disposal regulations.

**EC-Declaration of conformity**

Model IRD: EC-Certification No. BVS 10 ATEXE 130 X. DEKRA. Model IRN: ATEX declaration by manufacturer at 94/9/EC ATEX certification of quality type production of Ex devices at the directive 94/9/EC, CE 0158. Certification No: BVS 12 ATEX ZQS /E 118. The conformity of the devices with the EC standards and directives and the EC-type examination certificate and the observation of the Quality Safety System ISO 9001:2008 with the ATEX module "Production", declares:

Hans Bracher, Matrix Elektronik AG

IRD-LTD-OP\_e17/2015-06-24/HB

**Tippkemper - Matrix GmbH**  
 Meeger Str. 43 D-51491 Overath  
 Tel.: +49 2206 9566-0 Fax -19  
 info@tippkemper-matrix.com

**Matrix Elektronik AG (Manufacturer)**  
 Kirchweg 24 CH-5420 Ehrendingen  
 Tel.: +41 56 20400-20 Fax -29  
 info@matrix-elektronik.com