



Inductive Sensors series ISS/ISN/ISD-NS-10-B-GD

ISN-NS-10-B-GD

Housing M30

ISD-NS-10-B-GD


II 1/2D Ex tD A20/A21 IP67 T100°C



• Type: ISD-NS-10-B-GD: Applicable in Ex zones 1, 2, 20/21, 22

• Type: ISN-NS-10-B-GD: Applicable in Ex zones 2, 22

• For embeddable installation method






Technical Data Types	ISS-NS-10-B	ISN-NS-10-B-G	GD ISD-NS-10-B-GD
Type of Ex protection Gas, at 94/9/EG	None	II 3G Ex nA IIB	T4 II 2G Ex d IIC T5
Type of Ex protection Dust, at 94/9/EG	None	II3DExtDA22IP67T13	5°C II 1/2DExtDA20/A21 IP67T100°C
Applicable in Ex zones	None	2, 22	1, 2, 20/21, 22
Housing	M30, brass, nickel plated / Sensing area: Synthetic, PEEK mod.		
Installation method	embeddable		
Rated operating distance sn, (EN60947-2-5)	10mm, (on steel 37, 30 x 30 x 1mm, at embedded installation		
Assured operating distance sa	0mm to 8mm, +-1mm		
Hysteresis	0.5-1.5mm		
Safe switched OFF distance (sn x 3)	30mm		
Protection degree	IP67 at EN 60529		
Supply voltage	24VDC (20VDC to 28VDC)		
Absolute maximum supply voltage Um	30VDC		
Current consumption	20mA		
Maximum power dissipation	0.6W		
Response time	2ms		
Output	Push-pull / max. 50mA / short circuit protected		
Working temperature range Tamb	-10°C < T _{amb} < +60°C -10°C < T _{amb} < +50°C -10°C < T _{amb} < +50°C		
Storage temperature range	-45°C +60°C		
Connection, type ISD-NS-10-B-GD	Cable: TPU, AWM 20236, 3+PE x 0.5mm ² , shielded, Length: 6m		
Connection, types ISS/ISN-NS-10-B-GD	Socket M12, Lumberg type: RSF 5, 5 terminals		
Accessories	2x nuts M30. (Optional 1x clamp)		
Accessories, included,	- 1x Safety lock device, mount at the cable connection,		
only ISN-NS-10-B-GD	for locking the connection. (black synthetic device)		
	- 1x Warning plate "WARNING - Explosion Hazard - Do Not Dis-		
	connect While Circuit Is Live Unless Area Is Known To Be Non-		
	Hazardous", self-sealing, for gluing on the cable connector		
	- 1x Protection cap for the sensor connector.		
Accessories, not included	- Cord Set Lumberg RKTS 5-298/xx (straight type), or		
ISS/ISN-NS-10-B(-GD)	RKTW/RKWTH 5-298/xx (right angle type)		
Options	- Other cable length: Up to 100m on request		
	- ISD-NS-10-B-G S166: Working temperature range: -30°C to +55°C,		
	only Gas Ex: II 2G Ex d IIB T5		
		•	
Function and			
LED indication			
	Object detected, LED	green	No object detected, LED red
Output signal	PNP transistor: ON		ansistor: OFF
Output high	+24VD0) 	
+ VDC Object detected	$T \bigoplus_{30\Omega}$	1/9 (30Ω
ov	√ (√)	1, (K)
Output low	→ • ov		○ 0V
No object detected			
Installation: Lateral protection plates must not	rice above the concer	Other sensors for no	ot ISx-NS-10-B: For


Installation: Lateral protection plates must not rise above the sensor.

Sensors for not embeddable mounting arrangement have the highest operating distance, but a part of the parasitic lateral electromagnetic field can disturb the safe function. Lateral protection plates or other metallic objects must not influence the Sensor. For safe function a lateral free space around the sensor must be guaranteed.

The series ISx-10-B-GD, sensors for **embeddable** mounting, no lateral free space is

required (A=0). It's possible to realize a better mechanical protection and they have a higher immunity against spurious releasing. In a not embedded mounting arrangement the sensors reach a lower level of operating distance (sa) then sensors for not embeddable mounting.





CE 0158 Device type: ISD-NS-10-B-GD: Device type: ISD-NS-10-B-G S166: Device type: ISN-NS-10-B-GD:

Tamb: -10°C < Tamb < +50°C

GD

ISX-NS-10B

Manufacturer with address


II 3G Ex nA IIB T4, II 3D Ex tD A22 IP67 T135°C

ISD-NS-10-B-G S166: Tamb: -30°C < Tamb < +55°C

II 2G Ex d IIB T5

Production date: Numbers 4 to 7 of the serial number II 2G Ex d IIC T5, II 1/2D Ex tD A20/A21 IP67 T100°C Certification number: BVS 07 ATEX E 044 X Certification number: BVS 07 ATEX E 044 X AN-MAT-06-EX-ISN_4A Tech File No:

Electrical data according to the chart

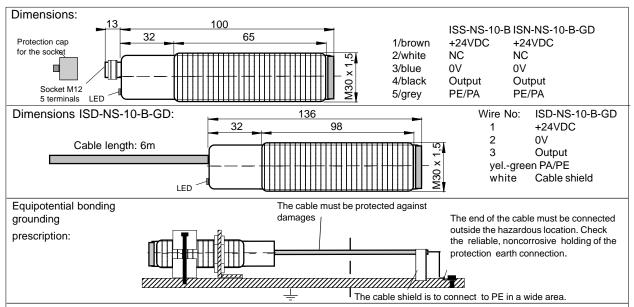

Operating manual / EC Declaration of Conformity:

Installation prescriptions for Ex hazardous locations

It is necessary to take into consideration the valid international and national rules and regulations (EN 60079-14). Do not exceed the housing and the cable shielding. The cable have to be installed and protected against damages. The cable with termination fittings, or in cable tray systems and installed in a manner to avoid tensile stress at the termination fittings. To connect cables inside hazardous locations only use certificated Ex e housings. All cable terminals must be connected outside hazardous locations.

Type ISD-NS-10-B-GD: Only applicable in Ex zones 1, 2, 20/21, 22. For the zones 20/21 only the front part (sensitive area) can be mounted inside the zone 20. The rear part with the cable must be in the zone 21.

Type ISN-NS-10-B-GD: Only applicable in Ex zones 2 and 22. The maximum input voltage Um=30VDC must not be exceeded. The local equipotential bonding have to be done reliable and noncorrosive over the terminal pin 5 and cable shielding. The protective earth (PE/PA) of the socket is solid connected with the housing. Do not separate the connector when the supply voltage is connected to the cable. When installing the sensor, the safety lock device must be fitted at the cable connector. The additional adhesive warning label must be fixed to the connector housing at the connection cable. Lumberg cordsets RKTS 5-298/xx (Straight type) RKTW/RKWTH 5-298/xx (Right angle type) are allowed ONLY. It is necessary to take into consideration the mounting prescription of the connector manufacturer. In dusty locations, the socket protection cap must be fitted, when the connection cable is NOT connected.

Additional safety information related Ex protection

BVS 07 ATEX E 044 X: X = The plastic part of the housing (sensitive area) must be protected against direct sunlight and UV irradiation.

General mounting prescriptions

Lateral protection plates must not rise above the sensor. Metallic protection plates must not rise above the sensor. Electrolytic fluids, graphitized greases or other magnetizable substances can disturb the correct function. The electrical connections must be exactly as shown in the connection diagram. The cable shield must be connected short. The cable shield must be connected to the protection earth, large-surfaced. Connection cables must not be installed parallel to high voltage cables.

Function

When a metallic object is entering the detection field, the output becomes active (switching to +24VDC). Is no object detected the output becomes inactive (switching to 0V).

Chemical resistance

The sensor must not be exposed to the following substances: Formic Acid, Chlorosulfonic Acid, Chronic Acid conc., Hydrochloric Acid, Hydrobromic Acid (100%), Oluem, Azotic Acid, Sulphuric Acid, Bromine, Chlorine, Ferric(III)-chlorid, Fluorine, Iodine, Sodium (hot), concentrated Phenol.

The sensor does not require any special maintenance. Magnetic precipitations must be cleared. Equipment must only be repaired or serviced by the manufacturer.

General notes to the operating distance

The nominal operating distance sn (EN60947-2-5) does not take into account production tolerances and influences of temperature maximum ratings. The local equipotential bonding have to be or voltage. The safe operating distance sa is the minimal reachdone. The protective earth (PE/PA) is solid connected with the able operating distance on steel 37 (30mmx30mmx1mm) on all mounting arrangements. On other materials or smaller objects a reduction factor must be taken into account.

Material	Reduction factor	
Steel 37	1	
Stainless steel	0,8	
Aluminum	0,4	

Safety distance sd: An inductive sensor is safe switched OFF, when the distance between sensor and actuator plate is greater then 3 x nominal distance sn.

General safety instructions

The dismounting of the connector safety lock device while the supply voltage is connected is hazardous! The mounting of the sensor in dusty locations without fixed cordset or protection cap results in a high ignition risk. The sensors must not be used for Accident-Prevention! In worst case the output can change to any state! When installing and operating with the sensor, it is necessary to take into consideration the relevant international and other national regulations: EN 60079-14, ATEX118a, UVV, BetrSichV, Directive 1999/92/EC

Standards met:

- EN 60079-0:2004, EN 60079-1:2004, EN 60079-15:2005,
- EN 60241-0:2004, EN 61241-1:2004;
- EN 60529:2000; EN 61000-4-2 bis EN 61000-4-6, EN 61000-6-1/-2, EN 61000-6-4;
- Ex protection: 94/9/EC (ATEX 100a)
- Machine directive: 2006/42/EC
- -EMC: 2004/108/EC,
- RoHS directive: 2002/95/EC

General notes, Disposal

We reserve the right to modify our equipment. Our equipment is designed in accordance with the RoHS directive. It neither emit or contain any damaging or siliconized substances and use a minimum of energy and resources. No longer usable or irreparable units must be disposed of in accordance with local waste disposal regulations.

EC Declaration of Conformity

ISD-NS-10-B-GD: EC type examination. No. ATEX BVS 07 ATEX E 044 X, DEKRA-EXAM ISN-NS-10-B-GD: Declaration of conformity by manufacturer at 94/9/EC. Tech-File: AN-MAT-06-EX-ISN_4A

ATEX certification of quality type production of Ex devices at the directive 94/9/EC Certification No: BVS 03 ATEX ZQS / E118. The conformity of the devices with the EC standards and directives and the EC-type examination certificate and the observation of the Quality Safety System ISO 9001:2008 with the ATEX module "Production", declares: Z. Joanle

Hans Bracher, Matrix Elektronik AG:

Tippkemper - Matrix GmbH Meegener Str. 43 D-51491 Overath Tel.:+49 2206 9566-0

AG (Manufacturer) CH-5420 Ehrendingen 56 20400-20 Elektronik 24 Kirchweg Fel.:+41 Matrix