

Original Operating Manual:
Glass Fibre Optics QWV-**-04-L-**-OP1/-OP2)**


- Stainless steel protection sheath, for light barrier measurement method
- QWV-****-04-L-**-OP1: For using in Ex Zones 0, 1, 2, 20, 21, 22
- QWV-****-04-L-**-OP2: For using in Ex Zones 1, 2, 21, 22
- QWV-****-04-L-**-**: Applicable in Non-Hazardous Locations

Ex op is IIC T4 Ga / Ex op is IIIB T135°C Da

Technical data	Type	QWV-xxxx-04-L-yy-OP1	QWV-xxxx-04-L-yy-OP2	QWV-xxxx-04-L-yy
Standard length, scanning width		xxxx= Length in mm, 500, 1000, 2500 / yy= scanning width in mm, 30 or 60		
Type of Ex Protection, Gas		Ex op is IIC T4 Ga	Ex op is IIIB T4 Gb	none
Type of Ex Protection, Dust		Ex op is IIIB T135°C Da	Ex op is IIIB T135°C Db	none
For using in Ex Zones		0, 1, 2, 20, 21, 22	1, 2, 21, 22	--
Maximum optical input power		<=15mW	<=35mW	Not limited
Maximum potential radiant intensity		<=5mW/mm ²	<=5mW/mm ²	Not limited
Active scanning width, types QWV-****-04-L-30		30 x 0.8mm		
Active scanning width, types QWV-****-04-L-60		60 x 0.4mm		
Active fibre optic diameter		2 x 4mm		
Active cross-sectional area		2 x 12.56mm ²		
Transmission rate, average		50-70%, at 870nm		
Optical aperture		appr. 65°, at 870nm		
Individual fibre diameter		50um		
Minimum bending radius		50mm (Single bend)		
Operating temperature range T _{amb}		-20°C < T _{amb} < +120°C		
Enclosure rating, according to EN 60529		IP 68		
Material, adaption probe tip		Special steel, 1.4305		
Material, probe tip		Special steel, 1.4305		
Material, protection sheath		Special steel, 1.4301		
Accessories, included		2 x Shrink-down plastic tubing		--

Options
EX Designation of the fibre optics

CE 1258 Manufacturer with address
 Type marking: QWV-****-04-L-**-OP1 Ex op is IIC T4 Ga, Ex op is IIIB T135°C Da
 Type marking: QWV-****-04-L-**-OP2 Ex op is IIB T4 Gb, Ex op is IIIB T135°C Db
 EC-Certification No: BVS 10 ATEX E130X. IECEx Certification No: IECEx BVS 14.0108X
 Ta: -20°C < T_{amb} < +120°C, Production date: Numerals 5 to 8 of the serial number(Y/W)
 (X designation of the certification number: Fibre optics must only be applied with sensors with certificated limited optical power)

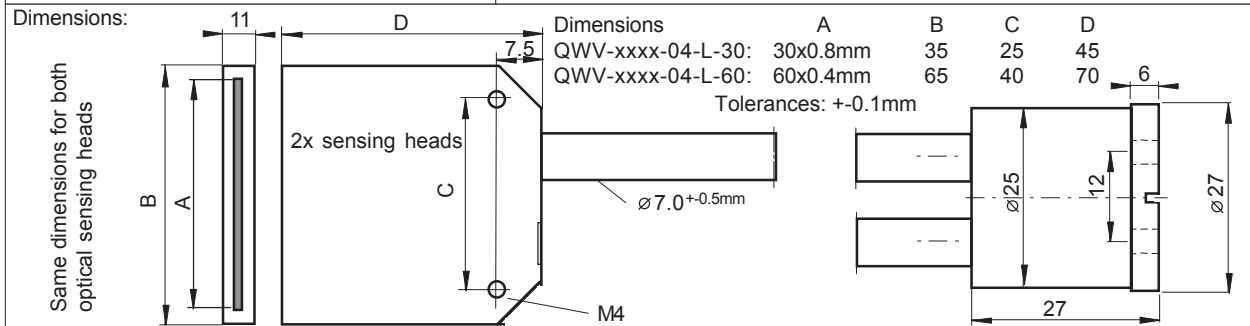

Operating Manual / EU - Declaration of Conformity:

Ex mounting prescriptions
Types QWV-**-04-L-**-OP1:**
 For using in Ex zones 0, 1, 2, 20, 21, 22.
Types QWV-**-04-L-**-OP2:**
 Only for using in Ex zones 1, 2, 21, 22.
General regulations for all types:
 The fibre optics must only be operated with IECEx/ATEX certified sensors with limited optical output power. The local equipotential bonding have to be done by grounding the fixed sensor. It is necessary to take into consideration the valid international and national rules and regulations (EN 60079-14). The maximum rated optical input power must not be exceeded. Other than original manufacturer, additional optical lenses are not allowed in hazardous locations. The fibre optics have to be installed in a manner to avoid tensile stress and frictional heat. If fibre optics and associated sensors are not mounted in the same hazardous location, the change over of the different areas must be realized in accordance with the valid regulations. With the additional shrink-down plastic tubings (only type QWV-****-04-L-**-OP1 a required change over can be realized).

Function
 The fibre optics series QWV-****-04-L-**-OP1/OP2 are designed for the construction of accurate width measurement or positioning with a light barrier measurement method arrangements in hazardous locations and for high ambient temperatures. The fibre optics can be operated with certificated Matrix sensors, with an optical wave length from 500nm to 900nm. The fibre optics must not be buckled or laid with a small radius. Buckled or bad laid fibre optics results to a strong decrease of performance. Avoid performance decreasing and failures caused by wear, by a functional mounting of the fibre optics.

Maintenance
 The fibre optics are maintenance-free. Protect the fibre optics against

pollution. If they are contaminated, clean with alcohol. Do not use aggressive solvents.

General Notes
 We reserve the right to modify our equipment. Our equipment is designed such way, that it has the least possible adverse effect on the environment. No longer usable or irreparable units must be disposed of in accordance with local waste disposal regulations. Equipment must only be repaired or serviced by the manufacturer.

Safety Informations
 When installing and operating, it is necessary to take into consideration the relevant international and other national regulations. EN 60079-14, single directive 1999/92/EC.
 Standards met: EN 13463-1:2009, EN 60079-0:2012 + A11:2013, EN 60079-28:2007, EN 60079-31:2010, EN 60529:2014, ATEX directive: 2014/34/EU, Machine directive: 2006/42/EC, RoHS directive: 2011/65/EU

EU-Declaration of Conformity
 IECEx certification No. BVS 14.0108X.
 ATEX certification: Certification No. BVS 10 ATEX E 130 X, DEKRA EXAM GmbH, Zertifizierungsstelle, Carl-Beyling-Haus, Dinendahlstrasse 9, D-44809 Bochum, Ident No. 0158.
 ATEX certification of quality type production of Ex devices in accordance to the directive 94/9/EC, CE 1258, Eurofins. Certification No: SEV 21 ATEX 4580, QAR No. CH/SEV/QAR21.0009/00. The conformity of the devices with the EC standards and directives and the EC-type examination certificate and the observation of the Quality Safety System ISO 9001:2015 with the ATEX module "Production", declares:

QWV-xxxx-04-L-xx-OP1-IECEX_e3/2022-04-19/MP

Tippkemper - Matrix GmbH
 Meesener Str. 43 D-51491 Overath
 Tel.: +49 2206 9566-0
 Fax: -19
 info@tippkemper-matrix.com

Matrix Elektronik AG (Manufacturer)
 Kirchweg 24 CH-5420 Ehrendingen
 Tel.: +41 56 20400-20
 Fax: -29
 info@matrix-elektronik.com

Pablo Ledergerber, Matrix Elektronik AG