

Rotation Speed Control Sensors series RSS/RSO/RSN/RSD-LTD-A08(-OP)
RSD-LTD-A08-OP
Housing M30
RSN-LTD-A08-OP


IECEx BVS 14.0108X



 II 2(1)G
II 2(1)D

IECEx designation:
 Ex d [op is Ga] IIC T6 Gb
 Ex tb [op is Da] IIIB T100°C Db IP67

- Well applicable with plastic fibre optics POF
- Speed control 1'000RPM to 80'000 RPM
- Analog current loop output 4mA to 20mA
- Type RSD: For use in Ex Zones (0),1, 2, (20),21, 22
- Type RSN: For use in Ex Zones (1),2, (21),22
- Type RSO: Optical radiation can operate into Ex Zone (2)
- Very high reliability (EMC)


 II 3(2)G Ex nA [op is Gb] IIB T4 Gc
 II 3(2)D Ex tc [op is Db] IIIA T135°C Dc IP67

Technical Data	Type	RSS-LTD-A08	RSO-LTD-A08-OP	RSN-LTD-A08-OP	RSD-LTD-A08-OP
Type of Ex protection, Gas, according to 2014/34/EU		NONE	II (3)G [Ex op is IIB T4 Gc]	II 3(2)G Ex nA [op is Gb] IIB T4 Gc	II 2(1)G Ex d [op is Ga] IIC T6 Gb
Type of Ex protection, Dust, according to 2014/34/EU		NONE	NONE	II 3(2)D Ex tc [op is Db] IIIA T135°C Dc IP67	II 2(1)D Ex tb [op is Da] IIIB T100°C Db IP67
For use in Ex Zones		Not for Ex zones	(2)	(1), 2, (21), 22	(0), 1, 2, (20), 21, 22
Laser class		Class II, 650nm visible red, Po <= 1mW			
Maximum optical irradiance		NOT LIMITED	<=5mW/mm ²	<=5mW/mm ²	<=5mW/mm ²
Maximum radiated optical power		NOT LIMITED	< 1mW	< 1mW	< 1mW
Frequency range		33Hz - 2666Hz (1'000RPM up to 80'000RPM, marking disc: 4 sections)			
Rise time		<= 2us			
Power up delay time		2sec			
Supply voltage		24VDC +/-10%			
Absolute maximum input voltage Um		30VDC			
Current consumption		70mA			
Power dissipation		maximum 1.85W			
Output		Analog current loop, 4.2mA to 20mA, PNP type			
Analog current output, resolution		95.7Hz / 15.63uA			
Ripple on the output current		<2%			
External load resistance		RL: 0Ω to 200Ω			
Housing		M30, brass, nickel plated			
Enclosure rating at EN 60529		IP 65	IP 65	IP 67	IP 67
Vibration shock resistance		Vibration: 30g over 20Hz to 2kHz. Shock: 100g for 3ms			
Ambient working temperature range Tamb		0°C up to +50°C			
Storage temperature range		-20°C ... +70°C			
Relative humidity		15% ... 90%, noncondensing			
Pollution degree, at EN 60664-1:2007		4			
Ambient illumination		only for using in enclosed ambients			
Device designation, at EN 60947-5-2		D3A30CS2		D3A30CS1	
Electrical connection		Cable, 3+PE x 0,5mm ² , shielded, jacket TPU, length:1.2m(+/-10%) with male connector M12			
Connection, ***-LTD-A08(-OP)-S099		Male connector, M12, 5 terminals		-	
Plastic optical fibre connection		Matched for POF, Cover: 2.2mm / Core: 1.0mm, without special tools			
Accessories, included all types		-2x Nuts M30			
Accessories, type RSN-LTD-A08-OP-S099, included		-1x Safety lock device, mount at the cable connection, for locking the connection. (black synthetic device) -1x Warning plate "WARNING - Explosion Hazard - Do Not Disconnect While Circuit Is Live Unless Area Is Known To Be Non-Hazardous", self-sealing, for gluing on the cable connector. -1x Protection cap for the sensor connector.			
Accessories, ***-LTD-A08(-OP)-S099 not included		- Single ended cordset, straight type: RKTS 5-298/xx or right angle type: RKWTH 5-298/xx, Lumberg M12/5P			
Accessories, all types, not included		- Different types of optical fibres, on demand - Fast fixing adapter for POF			
Options		- RSS/RSO/RSN-LTD-A08(-OP)-S099: - RSS/RSO/RSN/RSD-LTD-V08(-OP)(-S099):		Socket M12: Lumberg RSF 5 With analog voltage output 0V to 10VDC	
Output: Current loop output 4.2mA to 20mA 1'000 RPM to 80'000 RPM					

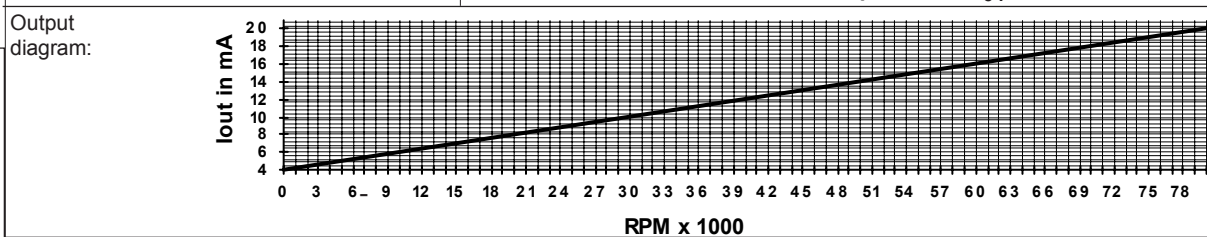

Ex related designations:

CE 1258

Type RSD-LTD-A08-OP:

 II 2(1)G Ex d [op is Ga] IIC T6 Gb
 II 2(1)D Ex tb [op is Da] IIIB T100°C Db IP67

Type RSN-LTD-A08-OP:

 II 3(2)G Ex nA [op is Gb] IIB T4 Gc
 II 3(2)D Ex tc [op is Db] IIIA T135°C Dc IP67

Type RSO-LTD-A08-OP:

II (3)G [Ex op is IIB T4 Gc]

Tamb: 0°C < Tamb < +50°C

Date of production:

(X designation of the certification number: Fibre optics must only be applied with sensors with certificated limited optical power)

Electrical data according to the chart

ATEX certification no: BVS 10 ATEX E 130 X &

IECEx certification no: IECEx BVS 14.0108X


Declaration by manufacturer, according to 2014/34/EU

Declaration by manufacturer, according to 2014/34/EU

Numerals 5 to 8 of the serial number (year/ calendar week)

(X designation of the certification number: Fibre optics must only be applied with sensors with certificated limited optical power)


Dimensions and connection layout
RSD-LTD-A08-OP
RSN-LTD-A08-OP:
 Male connector M12, 5 pins.
WARNING!
 Mount out of hazardous location!

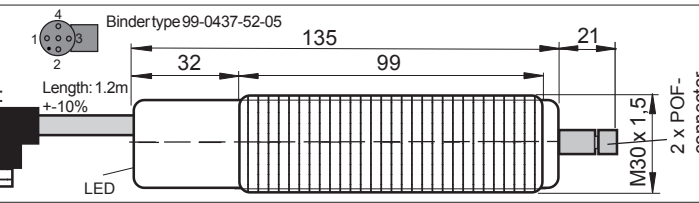

Connection: RSD/RSN-LTD-A08-OP

Wire No.	Socket No.	Function
1	1	+24VDC
2	2	Elx+
3	3	0V
--	4	Elx- (bridged to 3)
yel-grn	5	PE
white	--	Cable shield


Dimensions and connection layout
RSN/RSO/RSS-LTD-A08 (-OP)-S099:

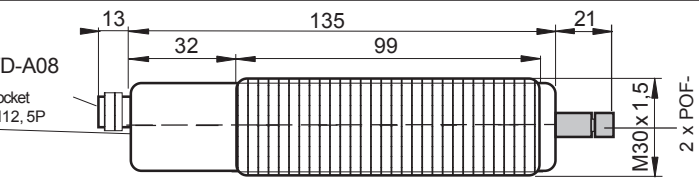

Connection: RSN/RSO/RSS-LTD-A08-OP-S099:

1/brown	+24VDC
2/white	Output
3/blue	0V
4/black	NC
5/grey	PE

Equipotential Bonding prescription:

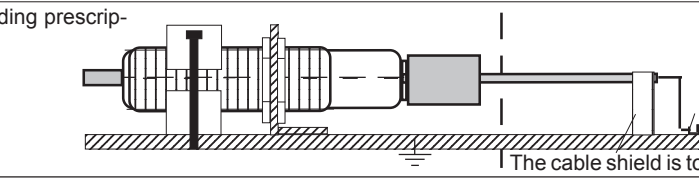

The end of the cable, or the connector, must be connected outside the hazardous location. Check the reliable, noncorrosive holding of the protection earth connection.
 The cable shield is to connect to PE in a wide area.

Operating Manual:

Ex protection:

General prescriptions for all Ex devices:
 It is necessary to take into consideration the valid international and national rules and regulations (EN 60079-14). The maximum input voltage $U_m=30VDC$ must not be exceeded. The local equipotential bonding have to be done. The protective earth (PE) terminal is solid connected with the housing. The cable have to be protected against damages. To connect cables inside hazardous locations only use certificated Ex housings. All cable terminals must be connected outside hazardous locations. Use only original manufactured fibre optics and additional optical lenses, other additional optical lenses are not allowed in hazardous locations.
Type RSD-LTD-A08-OP: Only for use in Ex zones 1, 2, 21, 22. The limited optical radiation can operate into hazardous locations 0 or 20 over certificated fibre optics or through a viewing glass.
Type RSN-LTD-A08-OP: Only for use in Ex zones 2, 22. The limited optical radiation can operate into hazardous locations 1 or 21 over certificated fibre optics or through a viewing glass.
Type RSN-LTD-A08-OP-S099: Only for use in Ex zones 2, 22. The limited optical radiation can operate into hazardous locations 1 or 21 over certificated fibre optics or through a viewing glass. Do not separate the connector when the supply voltage is connected to the cable. When installing the sensor, the safety lock device must be fitted at the cable connector. The additional adhesive warning label must be fixed to the connector housing at the connection cable. Lumberg cordsets RKTS 5-298/xx (Straight type) or RKWTH 5-298/xx (Right angle type) are allowed ONLY. It is necessary to take into consideration the mounting prescription of the connector manufacturer. In dusty locations, the socket protection cap must be fitted, when the connection cable is not connected.
Type RSO-LTD-A08-OP(-S099): The sensor must be installed out of the explosion risk area. The limited optical radiation can operate into hazardous location 2 over certificated fibre optics or through a viewing glass.

General mounting prescriptions:
 Do not exceed the maximum ratings. The electrical connections must be exactly as shown in the connection diagram. The cable shield must be connected short. The cable shield should be connected to the protection earth, large-surfaced. Connection cables must not be installed parallel to high voltage cables. Important notice: All wires must be connected!

Function:
 The sensor can only be used with connected fibre optics. Laser light reflection alterations, generated by the marking disc of the spraying apparatus, with 4 sections, will be converted to an analog current signal. The operating range is 1'000RPM to 80'000RPM. 1'000RPM = 4.2mA, 80'000RPM = 20mA. Lower speed then 1'000 RPM results to <3.2mA output signal. Higher speed then 80'000RPM results to 20mA output signal.
Current output 4.2mA to 20mA
 PNP type output. The load must be connected from the output to 0V and must be $\leq 200\Omega$.

Using the POF, plastic optical fibre optics
 The sensor RS*-LTD-A08(-OP)(-S***) must not go into operation without mounted plastic fibre optics. The fibre optics must be handled careful. The functional safety of the sensor is given by the condition of the marking disc and the careful working up of the optical fibres. The fibre optics must not be buckled or laid with a small radius. Buckled or bad laid fibre optics results to a strong decrease of performance. Avoid performance decreasing and failures caused by wear, by a functional mounting of the fibre optics.

Operating Manual / EU - Declaration of Conformity:

Maintenance
 Protect the fibre optic adaptor of the sensor and the optical fibres against pollution. If the fibre optic adapter is contaminated, clean with alcohol. Do not use aggressive solvents. Plastic optical fibres can be destroyed by strong solvents. Equipment must only be repaired or serviced by the manufacturer.

Safety regulations for Laser devices
 By the installation, the going into operation and the application, it is necessary to take into consideration the valid rule EN 60825-1/2 (Parts 12.5.1/12.6.2). Laser Class 2 without connected fibre optics. Do not stare into the beam!

General safety instructions
 Series RSN-LTD-A08-OP-S099: "WARNING - EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES. DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS". The mounting of the sensor in dusty locations without fixed cordset or protection cap results in a high ignition risk. The sensors must not be used for Accident-Prevention! In worst case the output can change to any state! When installing and operating with the sensor, it is necessary to take into consideration the relevant international and other national regulations:

EN 60079-14, ATEX 118a, single directive 1999/92/EC.
 The sensor and the fibre optic meets the requirements of:
 IEC/EN60079-0:2012+A11:2013, IEC/EN60079-1:2007, EN60079-15:2010, IEC/EN60079-28:2007, IEC/EN60079-31:2010, EN60825-1:2006, EN60825-2:2004, EN60529:2014, EN60950-1:2006; EN61000-4-2 to EN61000-4-6, EN61000-6-1/2, EN61000-6-4, ATEX directive: 2014/34/EU, Machine directive: 2006/42/EC, EMC directive: 2014/30/EU, RoHS directive: 2011/65/EU.

General Notes, disposal
 We reserve the right to modify our equipment. Our equipment is designed such way, that it has the least possible adverse effect on the environment. It neither emit or contain any damaging or siliconized substances and use a minimum of energy and resources. No longer usable or irreparable units must be disposed of in accordance with local waste disposal regulations.

EU-Declaration of conformity:
 Types RSD: IECEx certification: Ex d [op is Ga] IIC T6 Gb, Ex tb [op is Da] IIIB T100°C Db IP67. Certification No. IECEx BVS 14.0108X.
 Types RSD: ATEX certification: II 2(1)G Ex d [op is Ga] IIC T6 Gb, II 2(1)D Ex tb [op is Da] IIIB T100°C Db IP67. Certification No. BVS 10 ATEX E 130 X, Zertifizierungsstelle, Carl-Beyling-Haus, Dinendahlstrasse 9, D-44809 Bochum, Kennnummer: 0158.
 Types RSN: ATEX certification: II 3(2)G Ex nA [op is Gb] IIB T4 Gc, II 3(2)D Ex tc [op is Db] IIIA T135°C Dc IP67. ATEX declaration by manufacturer in accordance to 94/9/EC.
 Types RSO: ATEX certification: II (3)G [Ex op is IIB T4 Gc]. ATEX declaration by manufacturer in accordance to 94/9/EC.
 ATEX certification of quality type production of Ex devices in accordance to the directive 94/9/EC, CE 1258, Eurofins. Certification No: SEV 21 ATEX 4580, QAR No. CH/SEV/QAR21.0009/00. The conformity of the devices with the EC standards and directives and the EC-type examination certificate and the observation of the Quality Safety System ISO 9001:2015 with the ATEX module "Production", declares:

Pablo Ledergerber, Matrix Elektronik AG

RSD-LTD-A08-OP-IECEx_e7/2022-01-26/IMP

Tippkemper - Matrix GmbH
 Meeger Str. 43 D-51491 Overath
 Tel.: +49 2206 9566-0 Fax -19
 info@tippkemper-matrix.com
Matrix Elektronik AG (Manufacturer)
 Kirchweg 24 CH-5420 Ehrendingen
 Tel.: +41 56 20400-20 Fax -29
 info@matrix-elektronik.com